

LIST OF THE BASIC COMMAND LINES

To compile: `make telosb`

To flash a mote: `make telosb reinstall`

To compile and flash: `make telosb install`

To set MOTECOM: `export MOTECOM=serial@YourPort:telosb`, where YourPort = COMxx
or `/dev/ttyUSBx`

To listen: `java net.tinyos.tools.Listen`

USEFUL LINKS

[TinyOS Tutorial](#)

[CC2420 Radio Datasheet](#)

[Mote Datasheet](#)

[Temperature/Humidity Sensor Datasheet](#)